

## 2004 PONTIAC GTO RESET OIL SERVICE LIGHT

**Reset oil service light Pontiac GTO. From years: 2004, 2005, and 2006.**

### **How to reset the Pontiac GTO oil service light**

The GM Oil Life System calculates when to change your engine oil and filter based on vehicle use. Anytime your oil is changed, reset the system so it can calculate when the next oil change is required. If a situation occurs where you change your oil prior to a Service Engine Oil message being turned on, reset the system.



After changing the engine oil, reset the system by performing the following steps:

1. With the engine off, turn the ignition key to ON.
2. Fully press & release the accelerator pedal slowly two times within five seconds, if this does not work start again and then push gas pedal 3 times within 5 seconds.
3. Turn the key to LOCK.

If the Service Engine Oil message comes back on when you start your vehicle, the engine oil life system has not reset. Repeat the procedure.